

Load HIGH SIDE WALLS (VBK0022)

The optional side walls are necessary for use of the tarpaulin. The side walls can also be combined with the child seat.

- ! This manual consists of two parts (assembly instruction and manual).
Hand the manual over to the customer.

Scope of delivery

- 2x side wall
- 6x knob
- 8x rounded head bolt (Torx M 5 x 20 mm ISO 14583 A2)
- 8x countersunk screw (Torx M5 x 25 DIN 965 A2)
- 8x washer (d = 8,4mm DIN 125 A2)
- 1x bar Ø10 x 468 mm

Mounting the side walls

1. Stick countersunk screws (5) into knobs (4) and turn screws into the side walls as shown in fig. 1.
- ! Attention: turn in the screws orthogonal and do not tighten them too strong.
2. Place side walls at the front frame with knobs facing outside.
 3. Stick countersunk screws (1) into washers (2). Stick countersunk screws through the side wall holes (3) and turn them loose into the front frame.
 4. Adjust side walls and tighten all eight countersunk screws (1). **Tightening torque 3 up to 5 Nm.**
 5. Mount bar (6) with two rounded head bolts. **Tightening torque 5 up to 7 Nm.**
- i The bar is not needed in combination with a child seat.



Fig. 1: mounted side walls

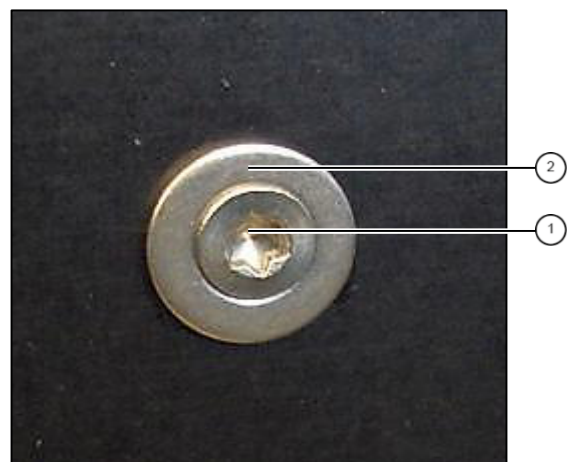


Fig. 2: countersunk screw with washer

Load HIGH SIDE WALLS (207071)

- i** Wood is a natural material. So please check the tight attachment at a regular base.
- i** We recommend to renew the wood oil at all edges if the Load is often used at rain or humid conditions.

Stand: 24.09.2019 12:40:00

Datei: VBK0022-L-Seitenwände-hoch-160603.docx