

Load HIGH SIDE WALLS (VBK0006)

The optional side walls are necessary for use of the tarpaulin.

- !** This manual consists of two parts (assembly instruction and manual).
Hand the manual over to the customer.

Scope of delivery

- 2x side wall
- 1x Cargo back wall
- 6x knob
- 6x rounded head bolt (Torx M 5 x 20 mm ISO 14583 A2)
- 8x countersunk screw (Torx M5 x 25 DIN 985 A2)
- 2x countersunk screw (M10 x 20 A2)
- 8x washer (d = 8,4mm DIN 125 A2)

Mounting the side walls

1. Stick countersunk screws **5** into knobs **4** and turn screws into the side walls as shown in fig. 1.
- !** Attention: turn in the screws orthogonal and do not tighten them too strong.
2. Place side walls at the front frame with knobs facing outside.
3. Stick countersunk screws **1** into washers **2**. Stick countersunk screws through the side wall holes **3** and turn them loose into the front frame.
4. Adjust side walls and tighten all eight countersunk screws **1**. **Tightening torque 3 up to 5 Nm.**
5. Install Cargo back wall **6** with countersunk screws **7** (see fig. 3).

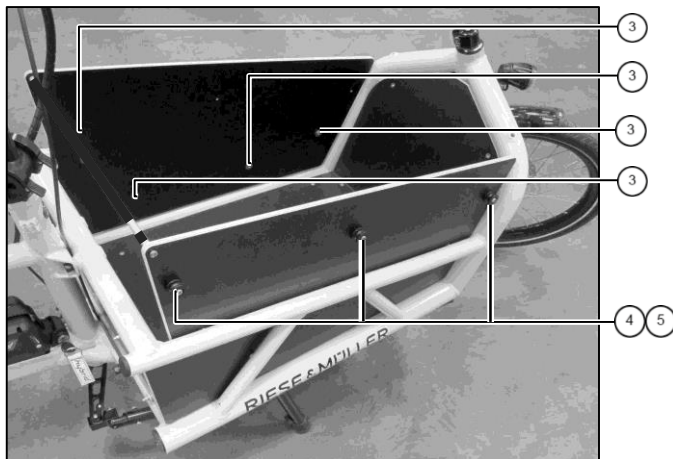


Fig. 1: mounted side walls

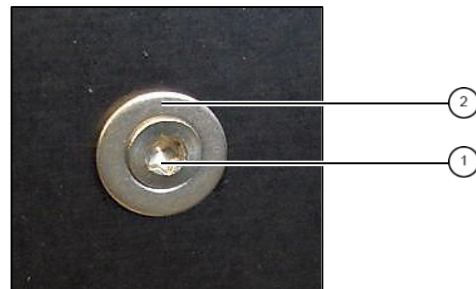


Fig. 2: countersunk screw with washer

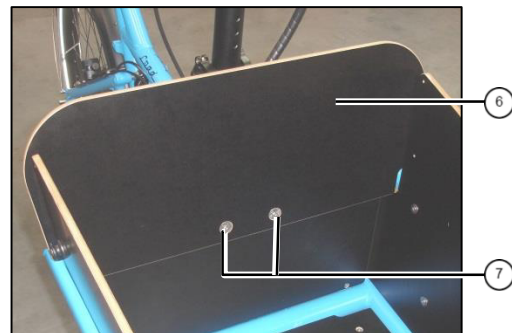


Fig. 3: Cargo back wall

Load HIGH SIDE WALLS (VBK0006)

- i** Wood is a natural material. So please check the tight attachment at a regular base.
- i** We recommend to renew the wood oil at all edges if the Load is often used at rain or humid conditions.

Stand: 24.09.2019 12:27:00

Datei: VBK0006-L-Seitenwände-innen-MY17-161202.docx