

Load LOW OUTER SIDE WALLS (VBK0028)

The outer side walls offer a good possibility to place advertising at the Load.

- ! This manual consists of two parts (assembly instruction and manual).
Hand the manual over to the customer.

Scope of delivery

- 1x left low outer side wall incl. rubber pads
- 1x right low outer side wall incl. rubber pads
- 4x clamp RSGU25/12, black
- 2x rounded head bolt (Torx M 5 x 12 DIN 965 A2)

Mounting the side walls

1. Place clamps at frame according to fig. 1. Schellen gemäß Abb. 1 am Rahmen platzieren. The front clamps ① sit above the rivet nuts and point to the rear side, the rear clamps ② sit below the rivet nuts and point to the front side.
2. Place right side wall with the rubber pads facing to the left side and turn bolts ③ carefully into the side wall. Do not tighten the bolts completely.
3. Adjust side walls and tighten bolts ③. **Tightening torque 2 up to 3 Nm.**
4. Repeat the steps for the left side wall.

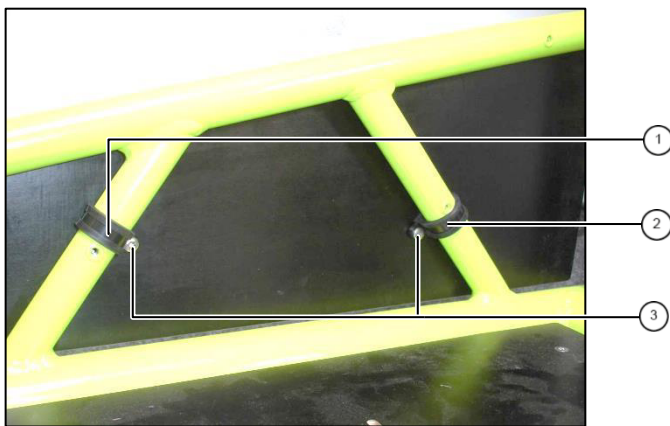


Fig. 1: right side wall

Load LOW OUTER SIDE WALLS (VBK0028)

- i** Wood is a natural material. So please check the tight attachment at a regular base.
- i** We recommend to renew the wood oil at all edges if the Load is often used at rain or humid conditions.

Stand: 12.04.2019 16:21:00

Datei: VBK0028-L-niedrige-Wände-außen-160506.docx