

Load LOW OUTER SIDE WALLS (VBK0005)

The outer side walls offer a good possibility to place advertising at the Load.

- !** This manual consists of two parts (assembly instruction and manual).
Hand the manual over to the customer.

Scope of delivery

- 1x left low outer side wall incl. rubber pads
- 1x right low outer side wall incl. rubber pads
- 4x bracket, black
- 4x rounded head bolt (M 5 x 12 Torx)
- 4x countersunk screw (M 5 x 16 ISO 14581 A2)
- 4x washer (d=5,2mm DIN 965 A2)
- 4x washer (d=8,4mm DIN 965 A2)

Mounting the side walls

1. Place brackets ① and ② according to fig. 1 at frame and install bolts ④ and washers ⑤ loosely (see fig. 2). Front front brakckets ① point to the front, rear brackets ② to the back.
2. Place right sidewall with rubber pads facing left. Carefully turn bolts ③ rectangular into the sidewalls. Do not fully tighten the bolts.
3. Align sidewall and tighten bolts ③ and ④. **Tightening torque 2 up to 3 Nm.**
4. Repeat steps for left sidewall.

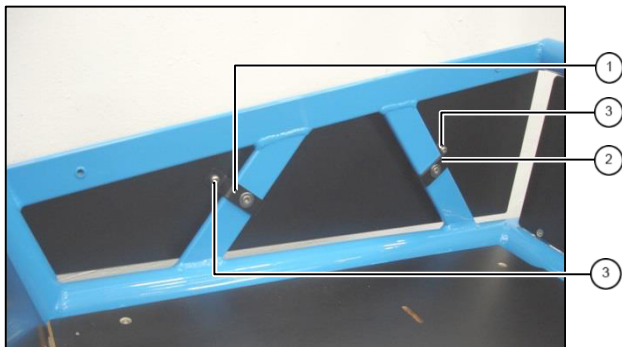


fig. 1: mounted right sidewall

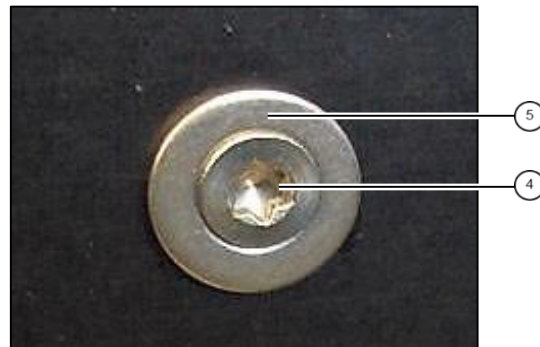


fig. 2: countersunk bolt and washer

Load LOW OUTER SIDE WALLS (VBK0005)

- i** Wood is a natural material. So please check the tight attachment at a regular base.
- i** We recommend to renew the wood oil at all edges if the Load is often used at rain or humid conditions.

Stand: 24.09.2019 12:26:00

Datei: VBK0005-L-Seitenwände-aussen-MY17-170223.docx