

Load 60 MY20 SEITENWÄNDE HOCH (VBK0280)

Die am Load 60 nachrüstbaren Seitenwände sind notwendig, wenn die Persenning verwendet wird.

Lieferumfang

- 2x Seitenwand
- 1x Cargo-Rückwand
- 6x Rundknopf
- 6x Thermoplastschraube (Torx 5 x 20 mm A2)
- 8x Senkkopfschraube (Torx M5 x 25 DIN 965 A2, brüniert)
- 2x Senkkopfschraube (M10 x 20 A2)
- 8x Unterlegscheibe (d = 8,4mm DIN 125 A2, brüniert)

Seitenwände montieren

1. Rundknöpfe ^④ auf Thermoplastschrauben ^⑤ stecken und Thermoplastschrauben ^⑤ gemäß Abb. 1 in Seitenwände schrauben.
- ❗ **Achtung:** Schrauben nicht schief eindrehen und nicht zu stark anziehen.
2. Seitenwände mit nach außen zeigenden Rundknöpfen an Innenseiten der Reling platzieren.
3. Unterlegscheiben ^② auf Senkkopfschrauben ^① schieben. Senkkopfschrauben durch Bohrungen ^③ der Seitenwände stecken und locker in die Gewinde in der Reling drehen.
4. Seitenwände ausrichten und alle acht Senkkopfschrauben ^① festziehen.
Anzugsmoment 3 bis 5 Nm.
5. Cargo-Rückwand ^⑥ mit Senkkopfschrauben ^⑦ montieren (siehe Abb. 3).

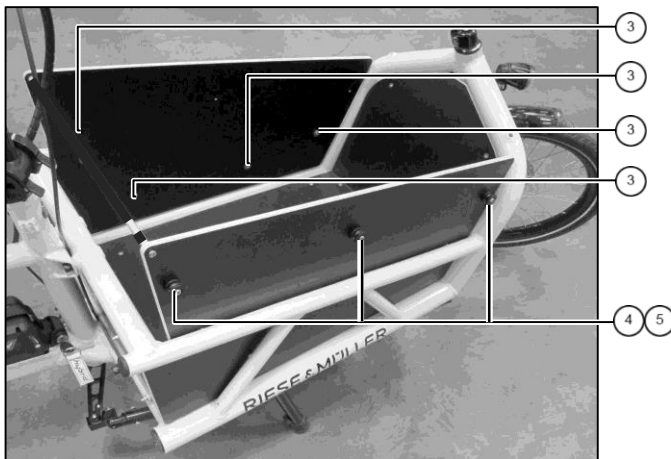


Abb. 1: Seitenwände montieren

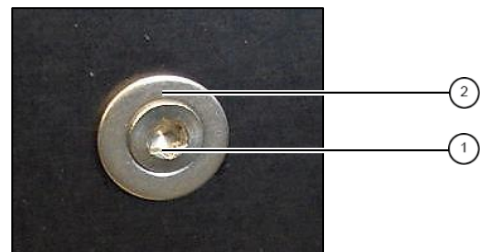


Abb. 2: Verschraubung

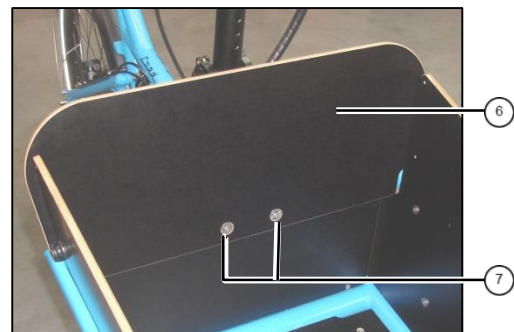


Abb. 3: Cargo-Rückwand

Load 60 MY20 HIGH SIDE WALLS (VBK0280)

The optional side walls are necessary for use of the tarpaulin.

Scope of delivery

- 2x side wall
- 1x Cargo back wall
- 6x knob
- 6x Thermoplast screw (Torx 5 x 20 mm A2)
- 8x countersunk screw (Torx M5 x 25 DIN 985 A2, gunmetal finish)
- 2x countersunk screw (M10 x 20 A2)
- 8x washer (d = 8,4mm DIN 125 A2, gunmetal finish)

Mounting the side walls

1. Stick Thermoplast screws ⁵ into knobs ⁴ and turn screws into the side walls as shown in fig. 1.
 - ❗ Attention: turn in the screws orthogonal and do not tighten them to strong.
2. Place side walls at the front frame with knobs facing outside.
3. Stick countersunk screws ¹ into washers ². Stick countersunk screws through the side wall holes ³ and turn them loose into the front frame.
4. Adjust side walls and tighten all eight countersunk screws ¹.
Tightening torque 3 up to 5 Nm.
5. Install Cargo back wall ⁶ with countersunk screws ⁷ (see fig. 3).

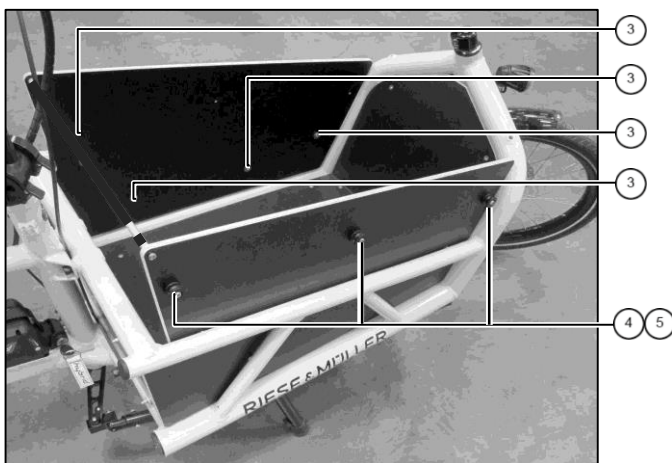


Fig. 1: mounted side walls

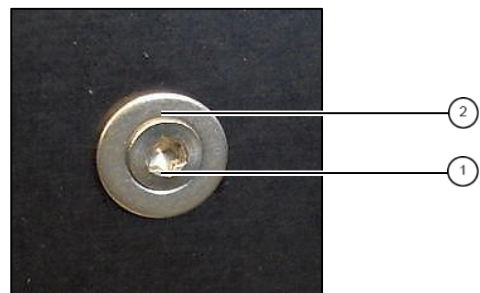


Fig. 2: countersunk screw with washer

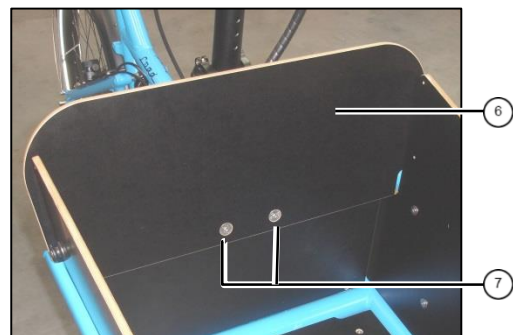


Fig. 3: Cargo back wall